

PLEASE READ THE INSTRUCTIONS BEFORE OPERATING THIS PRODUCT

STANDARD ROLL

(Fabric unrolls from behind blind)

1. To lower the fabric on the roller blind gently pull the operating chain closest to the window.
2. To raise the fabric on the blind gently pull the operating chain furthest from the window.
3. Where possible operating chain should be operated from just above the chain connector as this puts less pressure on this component, reducing the risk of snapping or pulling apart.

REVERSE ROLL

 
 
(Fabric unrolls from front of blind)

1. To lower the fabric on the roller blind gently pull the operating chain furthest from the window.
2. To raise the fabric on the roller blind gently pull the operating chain closest to the window.
3. Where possible operating chain should be operated from just above the chain connector as this puts less pressure on this component, reducing the risk of snapping or pulling apart.

MAINTENANCE

The product is maintenance free however we recommend that regular visual checks are completed to ensure that no components have been damaged, which could result in operating difficulties and/or cause a safety risk.

If any maintenance is required we recommend that the work is carried out immediately by a reputable blind company.

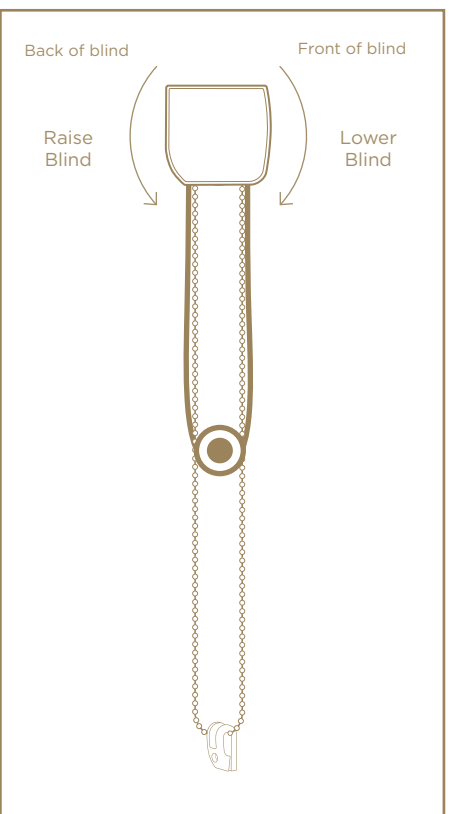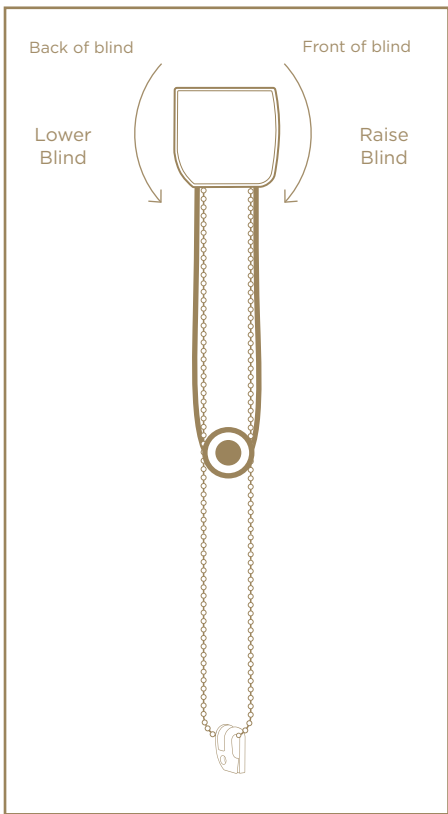

make it safe

 


WARNING

Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product. To avoid strangulation and entanglement, keep cords out of the reach of young children.

Cords may become wrapped around a child's neck.

Move beds, cots and furniture away from window covering cords. Do not tie cords together. Make sure cords do not twist and create a loop.

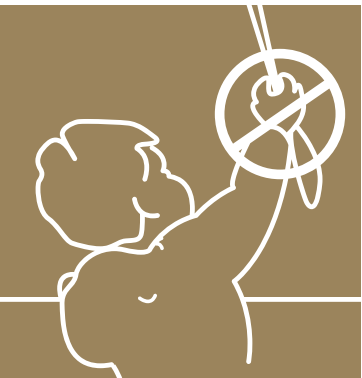

FIT85

CRUZE[®]
roller blind system

 


SOFTSHADE
Cruze Fascia System


YOU SHOULD HAVE

FASCIA BLIND


ONE OF THE FOLLOWING
BRACKET SETS

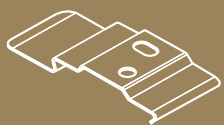

 Top Fix
Brackets
(standard
default
bracket)

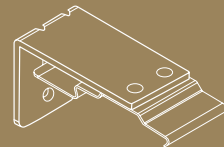

Face Fix
Brackets

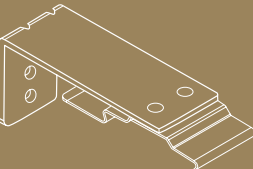 

Face Fix
Extension
Brackets

SAFETY DEVICES

 


COVER CAPS



YOU WILL NEED

- Screwdriver
- Pencil
- Power Drill
- Tape Measure

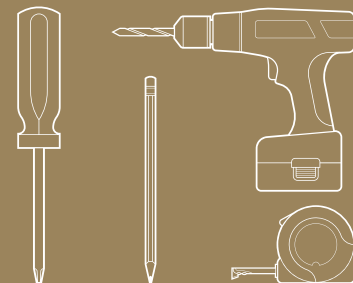

STEP 1

 
THE INSTALLATION OF THIS PRODUCT SHOULD BE CONDUCTED BY SOMEONE COMPETENT IN DIY.

OUTSIDE RECESS

If the blind is to be fitted outside the window ensure that measurement C is the same. Follow instructions for FACE FIXING. To calculate $C = (A - B) / 2$.

INSIDE RECESS


TOP FIX to the lintel. FACE FIX bracket to the window frame.

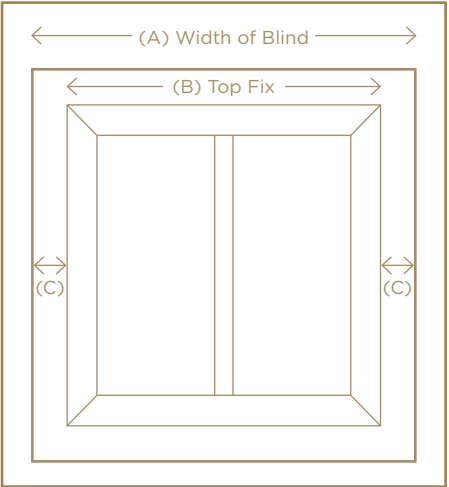

STEP 2

Carefully unwrap the roller blind and its associated brackets.

 
Top fix brackets come as standard with all roller blinds unless alternative brackets were selected during time of ordering.

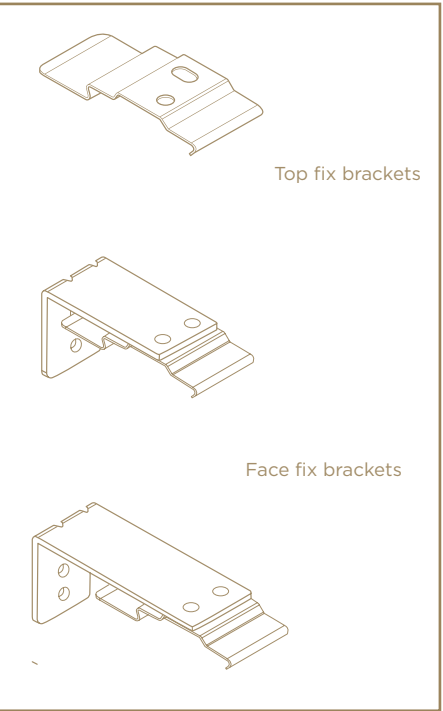

FITTING THE BRACKETS


For a blind up to 1 metre wide, affix two brackets in the recess where the blind is to be installed. Brackets should be approximately 75mm (3”) from each end of the blind. Any intermediate brackets should be spaced evenly between these and as a general rule:

 Up to 1000mm = 2 brackets
1001mm to 1500mm = 3 brackets
1501mm to 2000mm = 4 brackets
2001mm to 2500mm = 5 brackets

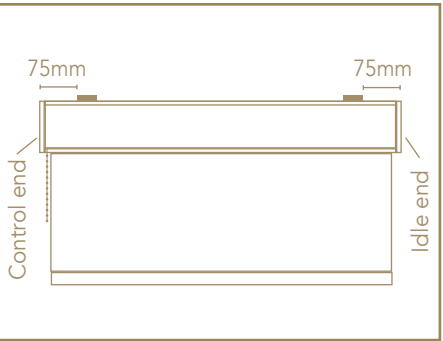

STEP 2 (CONTINUED)

 The bracket release lip on the bracket must face the back of the blind.

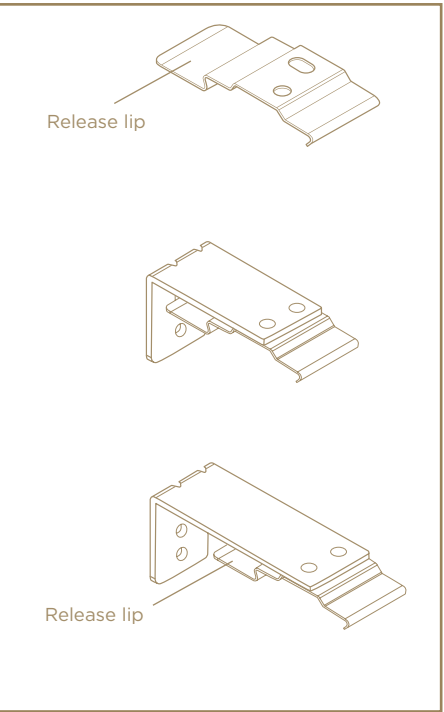

Mark the hole positions before drilling and plugging if necessary. Use two screws in each bracket ensuring that the brackets are level. Remember to allow room for the blind to clear any obstacles when deployed, e.g. door or window handles.

STEP 3

 
 
Place the cover caps onto each side of the blind.



STEP 4

FITTING THE BLIND

Once all the brackets are in place, attach the front of fascia to the front lip of brackets and push the back of fascia upwards until you hear a click. Your blind is now secured.

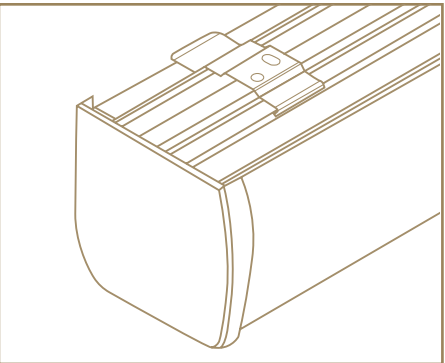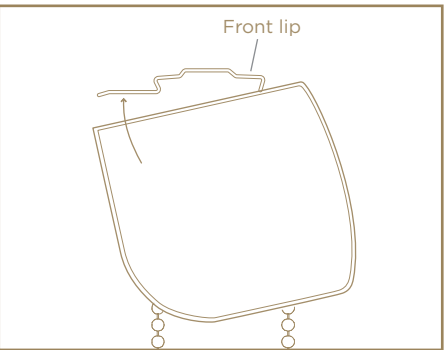

STEP 5

SAFETY DEVICE

(If your blind is supplied with a child safe easy break chain connector, there is no requirement to fit an additional child safety device. This section can be skipped.)

The safety device must be installed at the maximum distance possible from the control mechanism to prevent looped chain becoming slack.

 
Place the safety device on the wall and mark the position of the screw hole.

Drill hole using a suitable drill bit. Place device into position ensuring the chain is fully taut.



FITTING THE SAFETY DEVICE



Screw the safety device securely to the wall using suitable fixings.

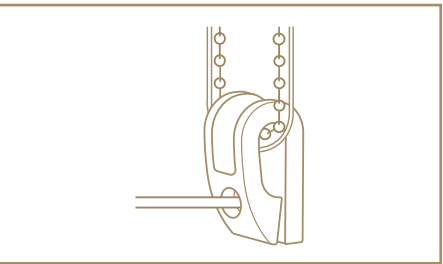

TROUBLESHOOTING


FABRIC RUN-OFF

  Diagram 1 shows the fabric running off from the right-hand side of the blind. To correct the run-off, unroll the fabric, place a 25mm piece of sticky tape onto the tube (Diagram 2) at the opposite end of the blind to the run-off. Fully wind the blind up. Repeat until the fabric is no longer running-off.

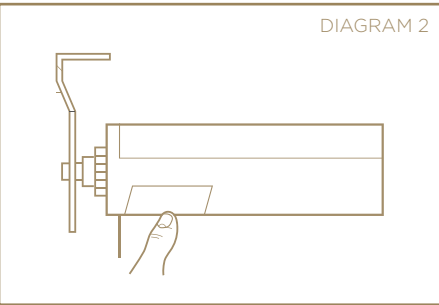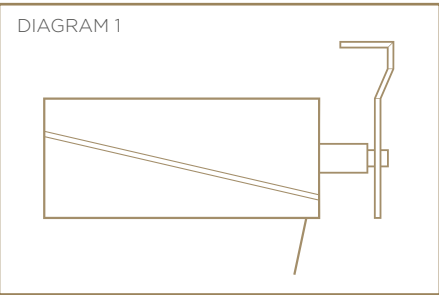


RIPPLED FABRIC

 If there is a ripple in the fabric, check the blind is installed horizontally (use a spirit level) and check the fabric is centred in the headbox.

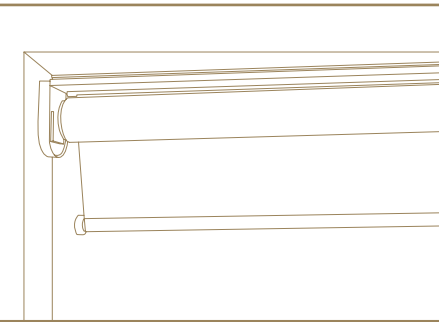

 If the blind is installed at an angle, insert packers in the window recess to ensure the recess is straight and the brackets are level.

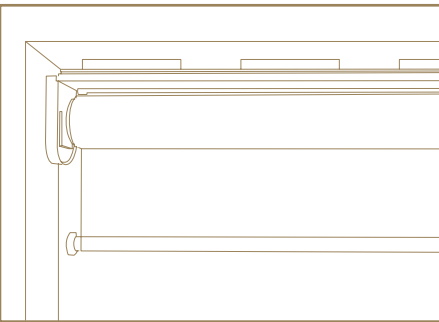

FABRIC ALIGNMENT

If the fabric edges are not aligned on the blind, slide the fabric that is attached to the headrail profile left or right so that both fabric edges are correctly aligned.

