

Somfy Tilt & Lift – Adding/Removing Remotes & Assigning/Deleting Channels

Adding Additional Remotes

In order to add additional remotes:

1. Press and Hold the Programming button on the back of the original remote until the blind jogs once
2. Press and Hold the Programming button on the back of the new remote until the blind jogs once

The new remote has now been added.

Removing a Remote

In order to remove a remote:

1. Press and Hold the Programming button on the back of the original remote until the blind jogs once
2. Press and Hold the Programming button on the Remote you want to remove until the blind jogs once

The remote will now be deleted and no longer operate the blind.

Copying to another Channel

1. Select the channel in which the blind is currently assigned to and you wish to copy
2. Press and Hold the Programming button on the back of the remote until the blind jogs once
3. Select the channel that you require the blind to be pasted in to
4. Briefly Press and Release the Programming button on the back of the remote until the blind jogs once

The blind will now be copied to the additional channel.

Deleting a Channel

1. Press and Hold the Programming button on the back of the remote until the blind jogs once
2. Select the channel that you require to be deleted
3. Press and Hold the Programming button on the back of the remote until the blind jogs once

The channel selected will now be deleted.