

Tensioning Neat Fit Blinds

Your blind is supplied with a spring and cord clamp. This enables you to have more or less tension on the blind once it is fitted.



How to operate

1. Holding the cord which protrudes from the cord clamp, slowly release the screws using a flat headed screwdriver as pictured. You do not need to remove the screw completely from its position, just loosen to free the cord.
2. When the cord is loose in the clamp, gently pull to apply more tension to your blind or release only a small amount to lessen the tension.
3. Finally, tighten the screws to clamp the cord in its new position to operate your blind.

