



## FLAT ROOF ROLLER – EDGE FITTING

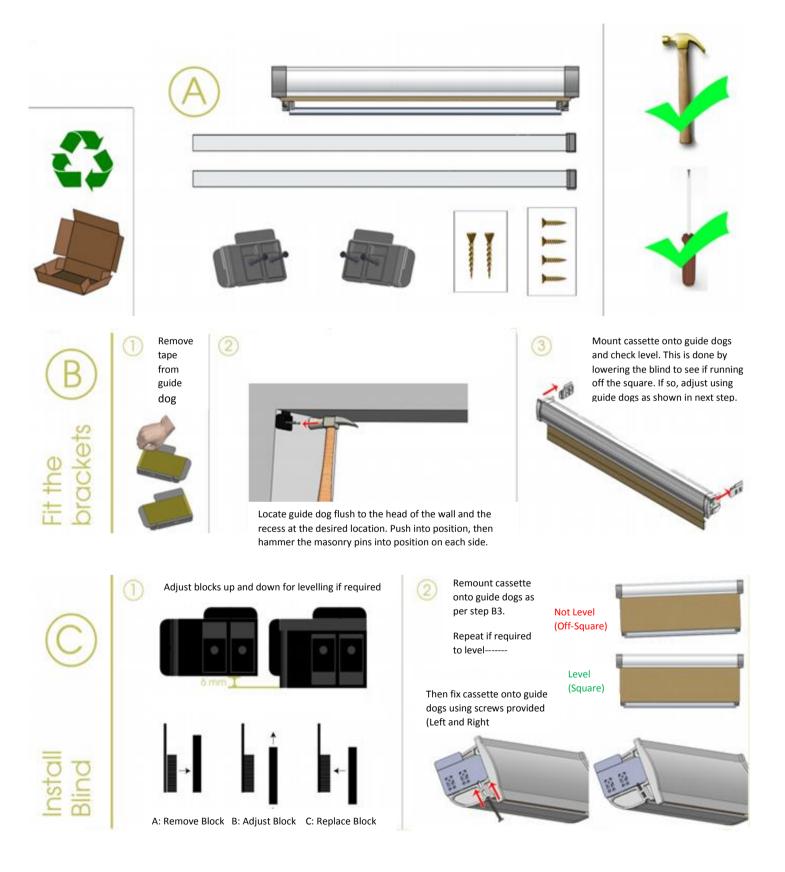

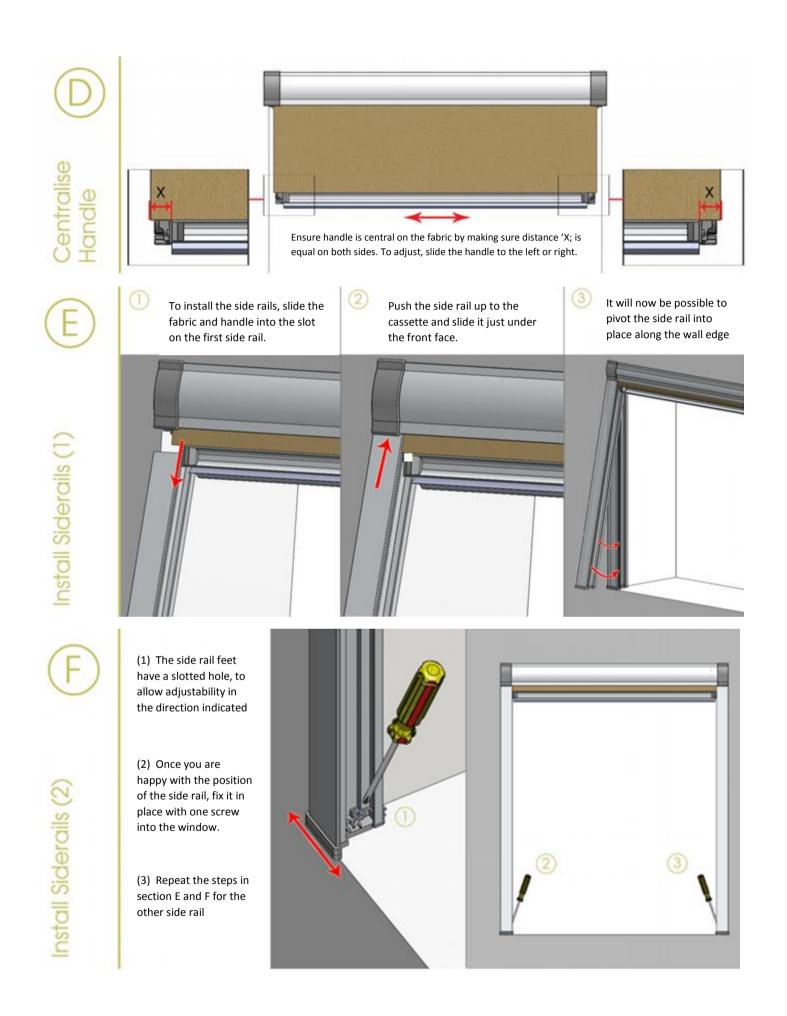



## How to Operate

(1) To operate the blind, push the handle in; it will rotate away from the side rails and 'unlock' (2) This will allow you to slide the blind up or down to the desired position (3) Once the blind is in the desired position release the handle and the blind will 'lock'





