 


ENGLISH

 
Tools needed




Contents of package

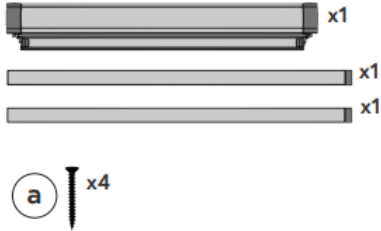


1 Fit cassette to top of window frame

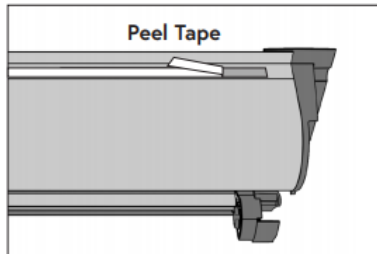

 Remove the adhesive tape from the cassette.

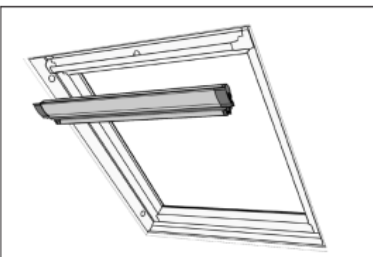


 Position the cassette at the top of the window frame and press firmly.

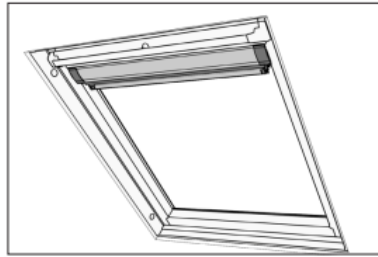


Support the cassette until screws have been secured.

 2 Secure cassette

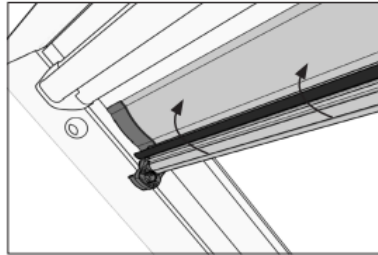


 Pull handle away from the window and fold upwards against the front of the cassette.

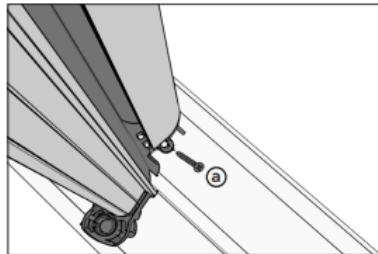


Secure the cassette using screw (a).

 3 Centralise handle

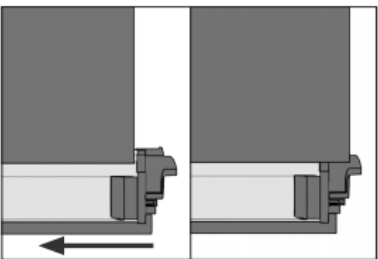


To centralise, gently slide the handle until fabric is even on both sides.

 4 Slide siderails into cassette

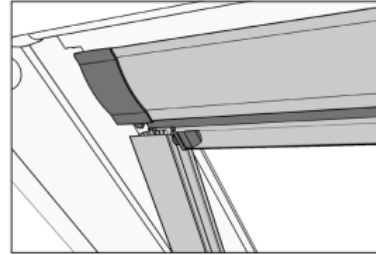


 Slide fabric into the front channel of the siderail.

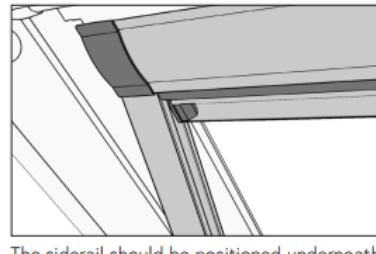


The siderail should be positioned underneath the front edge of the cassette.

 5 Secure siderails

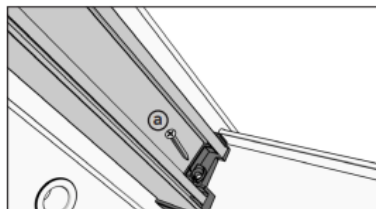


 Position the siderail against the window frame and secure using screw (a).

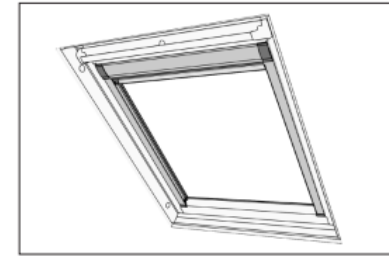


Repeat this process on both sides.

 How to operate - Always use two hands to lower and raise the blind.

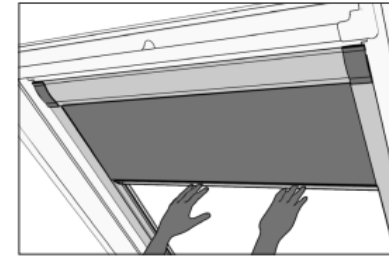

 During operation ensure your hands are centralised on the handle. To release the brake simply tilt the handle towards the window. The blind can now be lowered and raised.

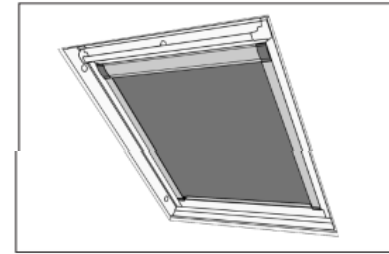

To lock the blind into position release your hands from the handle. Manual Skylight Blinds are often operated using the telescopic pole; please refer to those instructions for direction.