BlocOut Blind Recess Fitting

For more help, please search on YouTube for the 'Bloc Blinds' channel

A

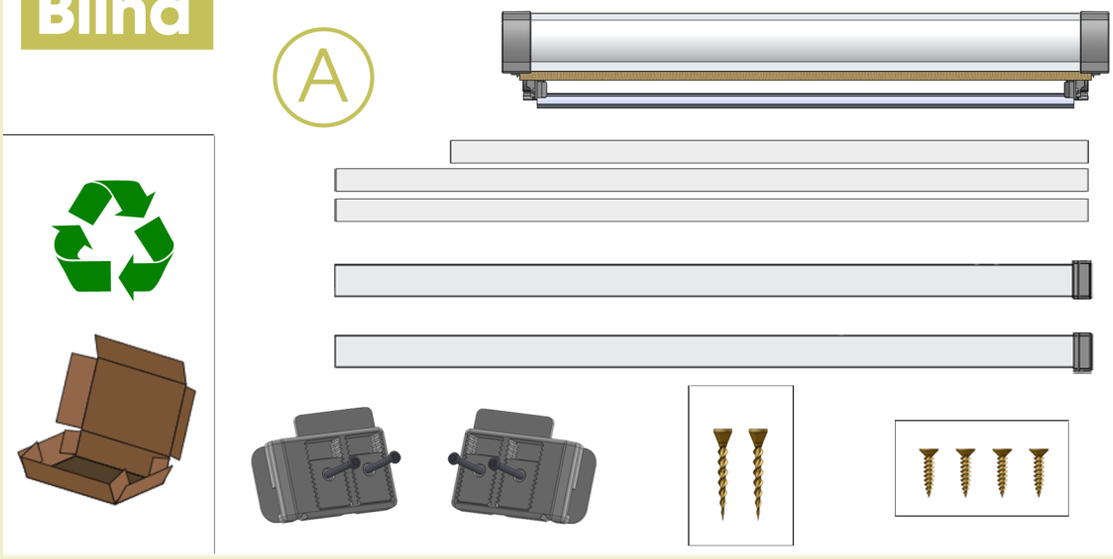

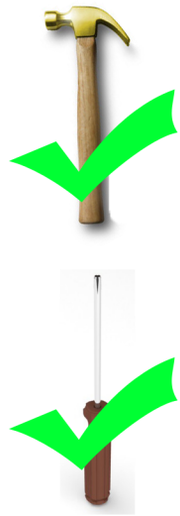

B Mount Frame

1. To allow your BlocOut blind to be fitted in the recess, a three-piece baton frame is supplied.

   This fits into the window as shown

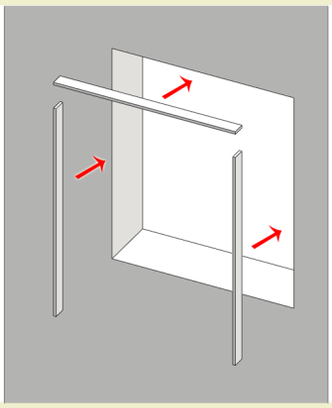

2. Measure and mark the desired distance 'X' for the blind to fit into the recess for each piece of the frame

   Then mount each section using the pins supplied and a hammer

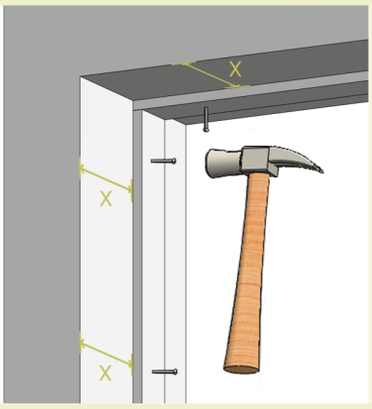

C Fit the Brackets

1. Remove tape from guide dogs

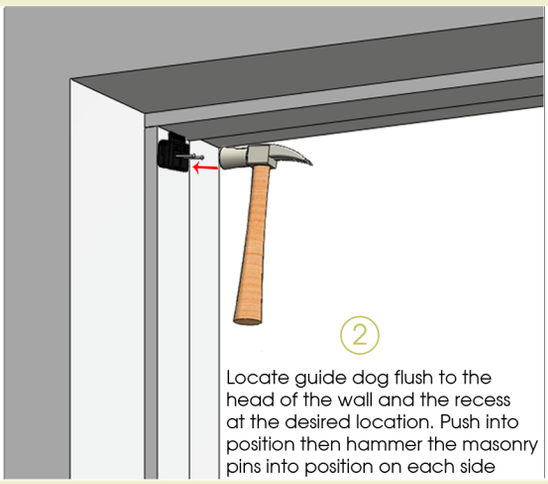

2. Locate guide dog flush to the head of the wall and the recess at the desired location. Push into position then hammer the masonry pins into position on each side

3. Mount cassette onto guide dogs and check level. This is done by lowering the blind to see if running off the square. If so, adjust using guide dogs as shown in next step

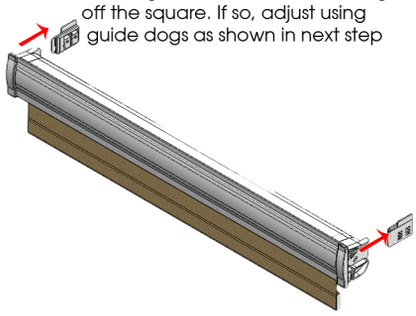

D Install Cassette

1. Adjust blocks up and down for leveling if required

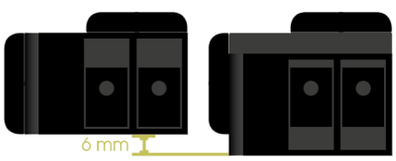

6mm of adjustment is available on both sides

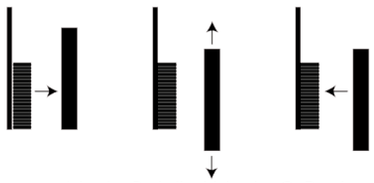

A: Remove block - B: Adjust block - C: Replace block

2. Remount cassette onto guide dogs as per step B3.

   Repeat if required to level ----->

Not Level (Off-Square)

Level (Square)

Then fix cassette onto guide dogs using screws provided (Left and Right)

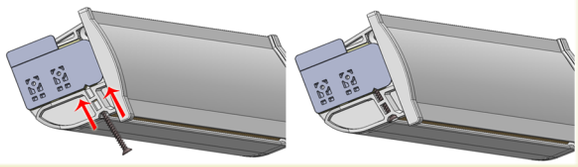

E Centralise Handle

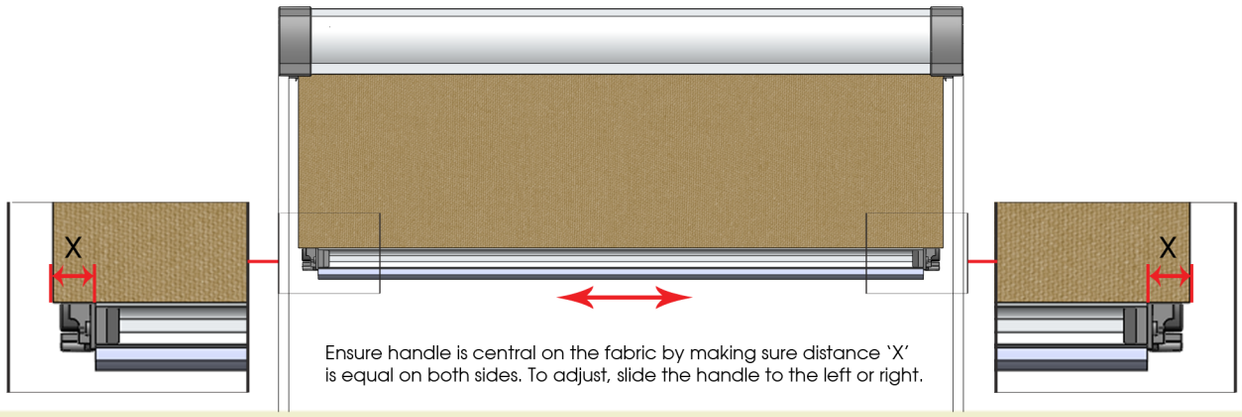

Ensure handle is central on the fabric by making sure distance 'X' is equal on both sides. To adjust, slide the handle to the left or right.

F Install Siderails (1)

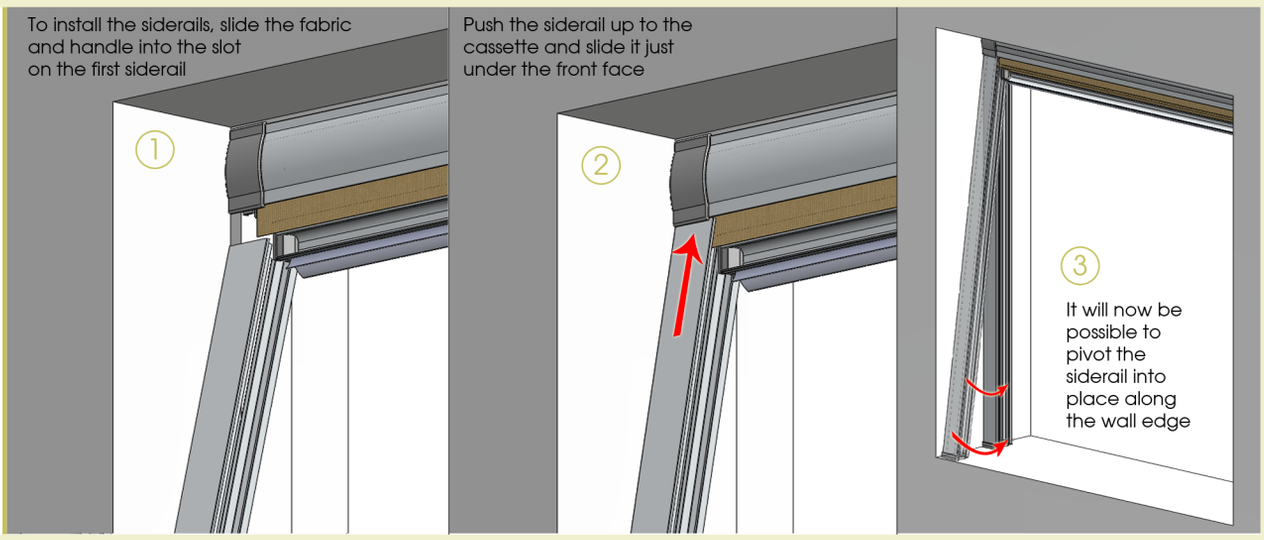

G Install Siderails (2)

(1) The siderail feet have a slotted hole, to allow adjustability in the direction indicated

(2) Once you are happy with the position of the siderail, fix it in place with one screw into the windowsill

(3) Repeat the steps in sections F and G for the other siderail

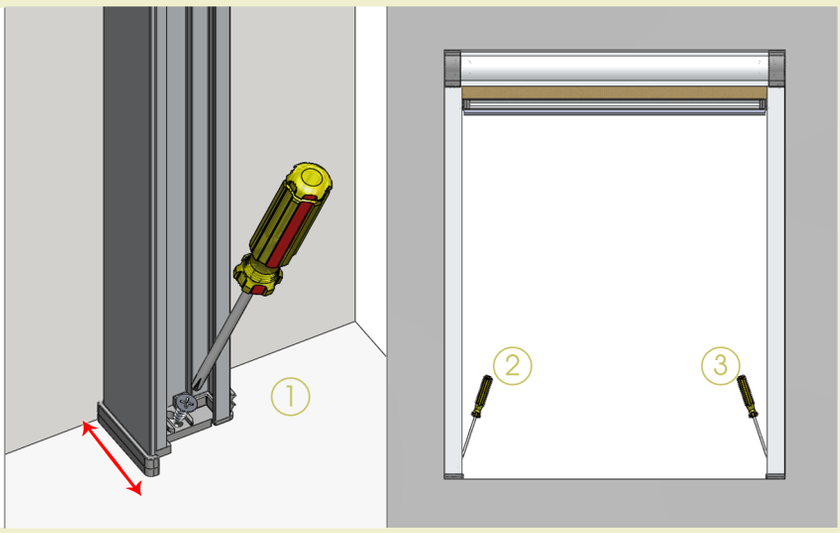

H How to Operate

(1) To operate the blind, push the handle in; it will rotate away from the siderails and 'unlock'

(2) This will allow you to slide the blind up or down to the desired position
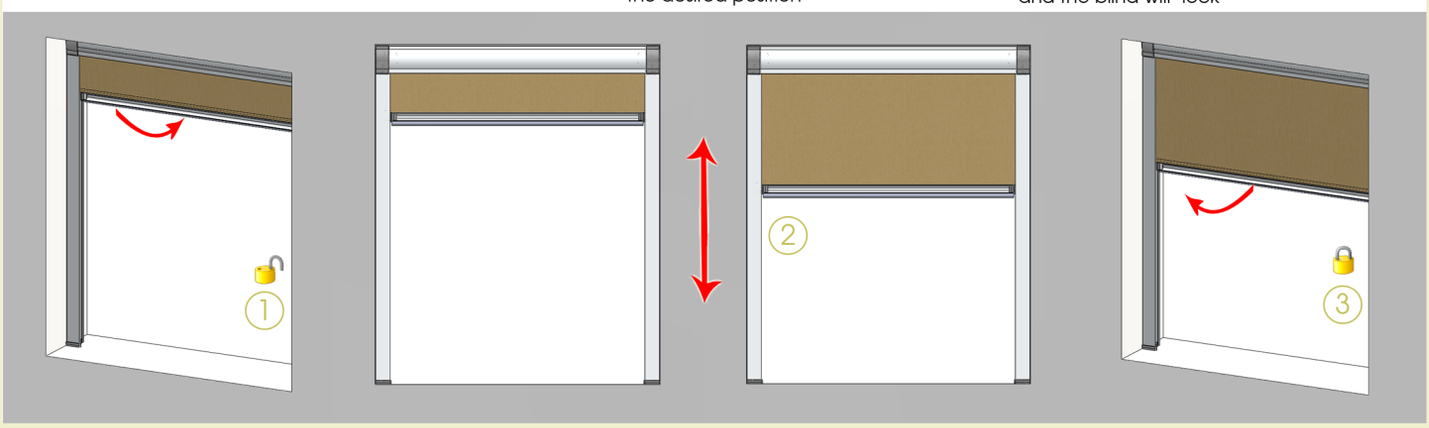
(3) Once the blind is in the desired position, release the handle and the blind will 'lock'