



TRANSFORMING WINDOWS

Fitting Instructions

Perfect Fit®

(Roller, Pleated, pleated honeycomb and Venetian
Perfect fit® Blinds)



Fitting Instructions
Perfect Fit® blinds

Fitting Instructions

Perfect Fit® Blinds

Roller, pleated, pleated honeycomb and venetian Perfect Fit® blinds

1. Identify the correct position for the brackets (85mm from beading) and slide them between the glass and the rubber seal. You can use a credit card to help you position the brackets correctly. Line up the bracket with the top or bottom of the credit card, depending on the corner of the window you're working on.
2. If a bracket is struggling to slot in, add a small amount of lubricant, such as washing up liquid. Make sure to remove any excess lubricant before attaching the frame.
3. Once all the brackets are securely positioned, hold the assembled blind in front of the brackets and ensure that the holes in the frame line up with the brackets.
4. Push the frame towards the window until the brackets slot into the frame of the blind. For an easier installation, push one side of the blind into position at a time.
5. Push the blind's end caps into the side grooves. Finally, push all the corner joint covers into position.



To ensure Perfect Fit® blinds are appropriate for your window,

check there is a 25mm clearance from the glass to any obstruction like the handle.



Ensure the window frame seals don't protrude over the glass more than 6mm. If the seals are compressible

you can take a bead-to-bead measurement. If they are not compressible, take a seal-to-seal measurement. If the details above do not apply to your seals, please contact your supplier/retailer immediately



Using a metal measuring tape, measure the width and the drop of your window size.

Measuring both corners and the middle of your window and using the smallest size taken is recommended.




Measure the depth of the window to gain the measurement from the face of the window frame to the glass (this is normally 20mm/24mm).


This final step will determine the size of the window fixing brackets you will use.




Perfect Fit® blinds:

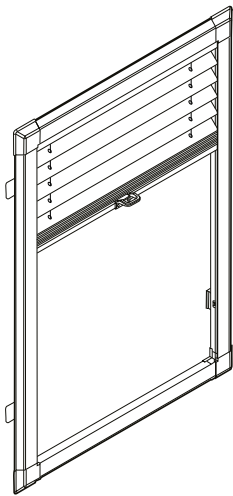


Perfect Fit® pleated

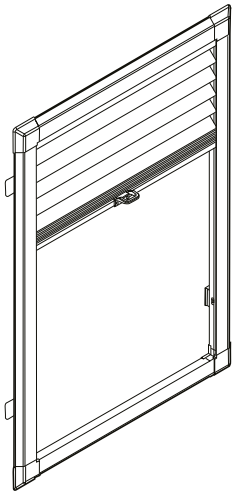

Perfect Fit® pleated honeycomb

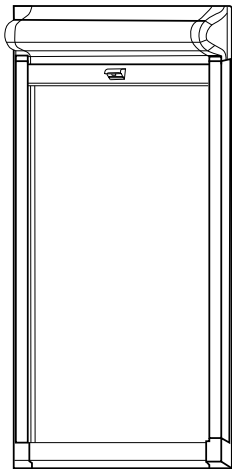

Perfect Fit® roller

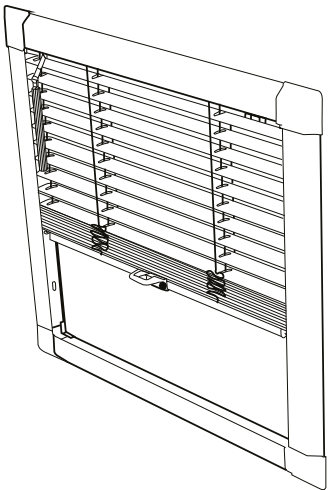

Perfect Fit® venetian



Head Office:

Vale Blinds Direct Ltd
Devon Park
Normanton Lane
Bottesford
Nottinghamshire
NG13 0EL

Call: 0044 (0) 1949 845399

Email: info@valeblinds.com

Website: www.valeblinds.com

For more information on all
Yewdale products, please call
the sales department.