





Flush or Recessed Rubber Bead

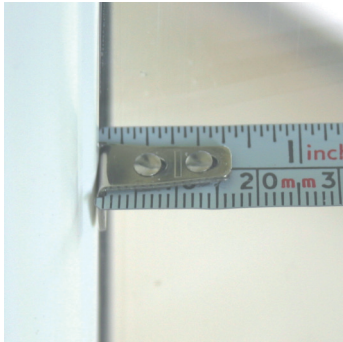

Measure clear glass width and drop

- min. width: 325mm
- max. width: 1400mm
- max. drop: 2000mm Type 1 Fabrics
1700mm Type 2 Fabrics
1200mm Type 3 Fabrics
- max. area: 2m²

Proud Rubber Bead

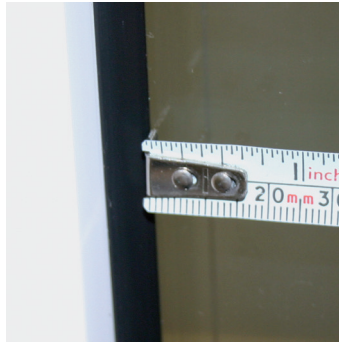

measuring the window

A

N.B. Please ensure windows have suitable rubber bead that accepts fitting of bracket

Tape Measure



Depth Gauge (TP487)




Min. Bead Depth: 21mm

For windows with a bead depth of less than 21mm, standard INTU® Roller should be used.

On frames with a bead depth of less than 52mm it should be noted that the headrail fascia will protrude beyond the flat face of the frame.

bead depth

B

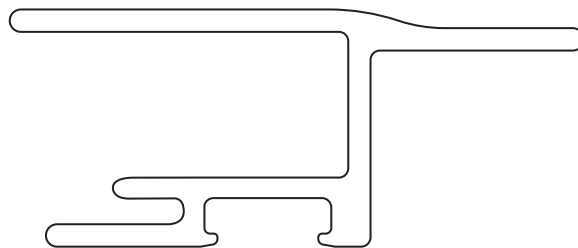


Side Extrusion: Large


side profile

C

Flush or Recessed Rubber Bead

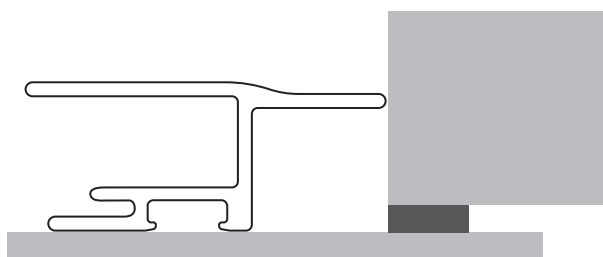

Straight Recess

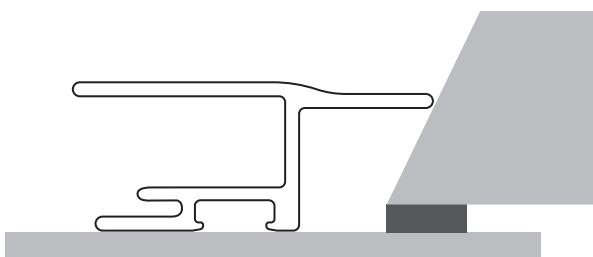


Sloped Recess


rubber bead

D

Exposed Rubber Bead

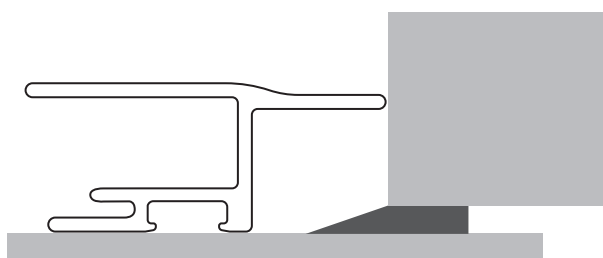

Straight Recess

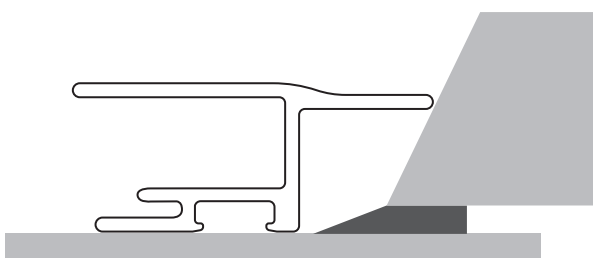


Sloped Recess




E
rubber bead fitting

Exposed Rubber Bead

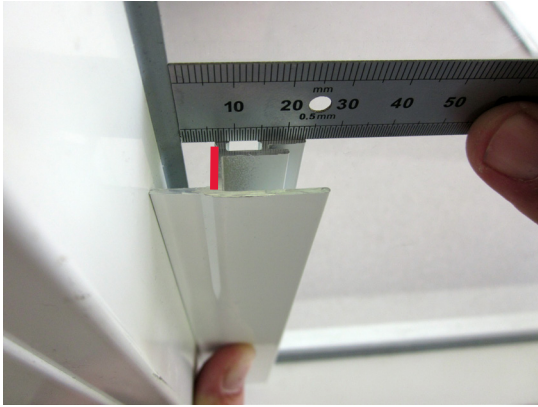

Size between edge of side extrusion indicated by red line and rubber bead should be measured as shown in these pictures. This size should then be deducted from the visible glass size measured. The size after deductions should be recorded on the order form as "Measured Glass Size".

Flush or Recessed Rubber Bead

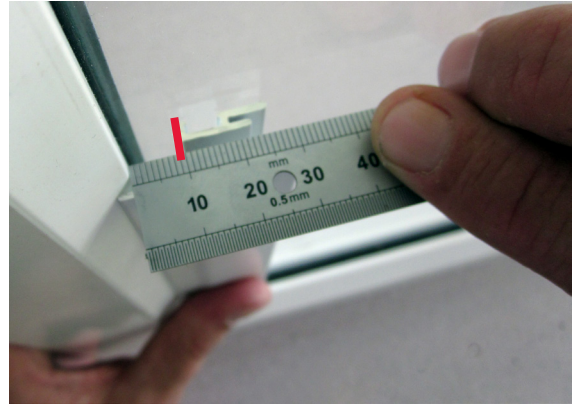

When measuring glass size ensure a section of side extrusion is used to measure deduction required.

Where fitting to 90° frame with flush/recessed rubber bead deduction from visible glass size will = 20mm.

F
bottom bar



Bottom Bar


When installation is complete, clearance between bottom bar endcap and side extrusion should be checked. This should be parallel along entire length of side extrusion. This can be checked by holding bottom bar tight against one side and measuring the clearance on the opposite side.

Max. clearance: 3mm




When window is slightly out of square, spacer pads should be used to ensure side extrusions run parallel.

G
fabric/headrail

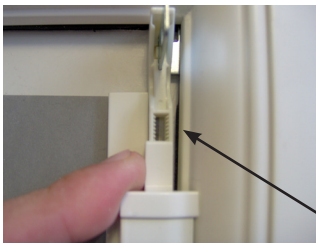

Fabric Alignment

eg. If fabric is rolling off to left hand side, lower right hand corner bracket. Blind should be checked when installation is complete to ensure that fabric is rolling up parallel. Where this is not the case the blind can be adjusted, as shown left, by moving one side extrusion up or down within the ratchet lock area. This will in turn induce the fabric to roll to one side as required.

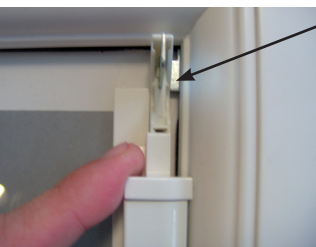


eg. If fabric is rolling off to left hand side, lower right hand corner bracket as shown opposite, this can be done by releasing the side extrusion locking bracket from the ratchet lock, slide corner bracket down, lock side extrusion back into ratchet lock.

Headrail Adjustment

The side extrusion ratchet can also be used to adjust the height of the headrail within the frame to ensure that no visible gaps can be seen between headrail and the top edge of the window frame.

H
headrail lock

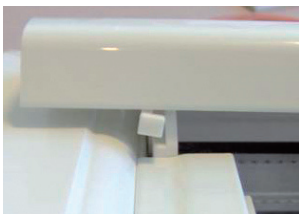

Blind unocked

Headrail Lock

After installation ensure that headrail locking arm is fully engaged. This can be checked by looking from below to ensure locking arm is sitting parallel with mating bracket.

It is important to ensure that blind is always left in the locked position.



Blind locked